
Mercedes-Benz GL(X166)/ML(W166)-Class installation guide



1. Original Monitor(Please power off before installation)



2.Pry out the decorative strip of air conditioning knob

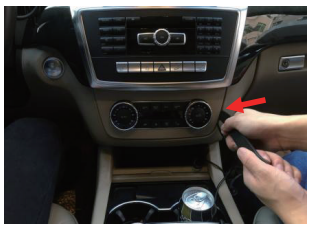


3.Remove the fixing screws of air conditioning knob




4.Pry out the original HOST



5.Remove the fixing screws of the air conditioning

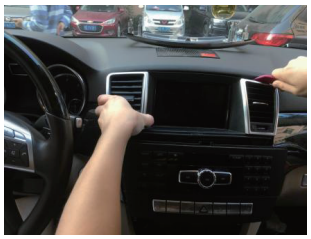


6.Open the air conditioning vent panel

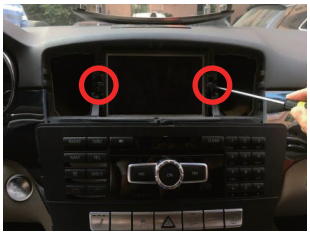


7. Loosen the original car screen fixing screw




8.Connect the fiber optic cable of the original car to android harness.

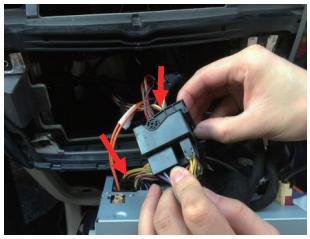

9.Remove the power harness from original host, and connect it to android harness.

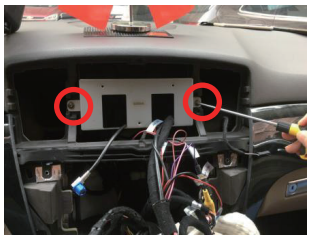

10.Install the the fixed stand

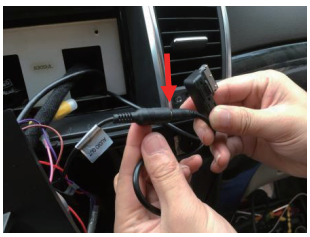

11. Connect the AMI audio cable



12.Restore the air conditioning panel and install the base of android monitor.



13. Insert the AMI audio adapter cable into the armrest box interface



14. Connect well Android all cables




15. Fixing and install android device



16.Effect picture after installation



17.Effect picture after installation

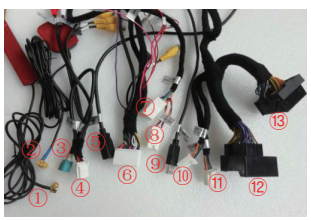

18. Android Cables connector

1.4G antenna Port
2.GPS antenna Port
3.RCA cable LVDS adapter
4.RCA Port
5.USB Port
6.Android Power Interface
7.2015/2016 year shared CAN interface
8.2015/2016 year short-circuited wiring interface
9.Audio USB port
10.2015 year CAN interface
11.2016 year CAN interface
12.ISO female plug
13.ISO male plug